
AUTOMATIC 3 HANDS MULTIFUNCTION (DAY / DATE / MONTH / 24H)

A) DISPLAY

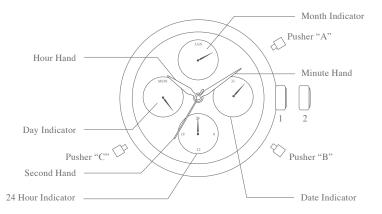

B) WINDING THE MAINSPRING

EARNSHAW

Automatic winding watch can be hand wound by turning the crown in it's normal crown position. Wind 15-20 times and it will start to move naturally after shaking slightly.

C) TIME SETTING

- 1. Pull the crown to **position 2**.
- 2. Turn the crown to set hour and minute hands.
- 3. Push the crown back to **position 1**.

D) QUICK CHANGE CORRECT OR FOR DATE (Push "B" at 4 o'clock position)


- 1. Pull the crown to **position 2**.
- 2. Pressing **Pusher "B"** moves the date forward by one day. You must **not** use this quick change corrector between 11:30 p.m. and 5:30 a.m. because the automatic change mechanism is in operation between these times.

E) QUICK CHANGE CORRECT OR FOR DAY (Push "C" at 8 o'clock position)

- 1. Pull the crown to **position 2**.
- 2. Pressing **Pusher "C"** moves the Day Indicator forward by one day.
- 3. You must **not** use this quick change corrector between 11:30 p.m. and 5:30 a.m. because the automatic change mechanism is in operation between these times.

AUTOMATIC 3 HANDS MULTIFUNCTION (DAY / DATE / MONTH / 24H)

A) DISPLAY

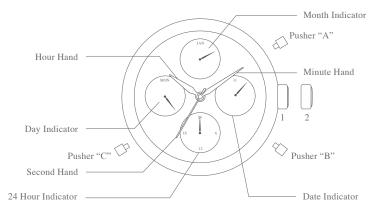

EARNSHAW

F) QUICK CHANGE CORRECT OR FOR MONTH (Push "A" at 10 o'clock position)

- 1. Pull the crown to **position 2**.
- 2. Pressing Pusher "A" moves the Month Indicator forward by one month.
- 3. You must **not** use this quick change corrector on the 31st of the month between 11:30 p.m. and 5:30 a.m. because the automatic change mechanism is in operation between these times.

G) SET DATE, DAY & MONTH

- 1. Pull the crown to **position 2**.
- 2. Continue rotating hands until 6.00 a.m. Use the quick-change correctors to set the date (**Pusher "B"**), day (**Pusher "C"**) and month (**Pusher "A"**). Use the crown to turn the hands forwards until the current date is reached. You have now set the correct date, day and month.

NOTE:

This watch MUST be worn for at least 8 (Eight) hours each day to ensure it is fully wound.

An automatic watch will only wind when the watch is on your wrist and your arm moves.

Winding the watch by the crown will put power on the spring but not enough to allow the watch to function fully.

If your watch stops overnight or loses time it means it is not being fully wound.